

Owner's Manual

Caution!

Disconnect the Battery Box and switch the circuit breaker to the off position before doing any work on the lawnmower

Operating Lawnmower

Before starting lawnmower make sure that the battery box is attached and the circuit breaker is switched to the on position. Squeeze safety bar to the handle and push starting lever forward until mower is started then release.

Charging the battery pack

With the mower off, disconnect battery box from the mower. Lift the battery box out using the handles on the side. Connect the supplied charge adapter to the battery box and plug the other end of the charger into an 110VAC socket. Charge until the indicator light on the charger declares a 100% charged.

Replacing lawnmower blade

Remove battery box from the lawnmower. Flip the lawnmower onto its side. Use _____ socket to remove bolt through the blade. Optimal blade replacement will be 15-3379 - 18" Grasshopper 320236 Blade. Remove old blade and replace with new blade making sure to tighten the bolt.

Motor Maintenance

Yearly or every 100 hours the brushes in the motor must be inspected for wear. Replacement of brush housing is recommended when brush length is at 1/8" above brass holder. Replacement brush pack can be ordered from the nearest Briggs & Stratton Dealer using Product Number (P/N) 696952.

Component	Manufacture	Product	Other Details
DC Electric Motor	Briggs & Stratton	Etek	Lynch Electric Motor
Batteries	Power Sonic	PSH- 12180	12V, 21 Amp. Hrs.
Circuit Breaker	?	72015K34	80VDC, 40amps Interrupt-current rating – 1500amps